

### SEA-BIRD ELECTRONICS, INC.

1808 136th Place N.E., Bellevue, Washington 98005 USA Telephone: (425) 643-9866 Telex: 292915 SBEI UR

Fax: (425) 643-9954 email: seabird@seabird.com

SBE P/N 60032.1

DATE	SYM	REVISION RECORD	AUTH	DR	CHK
08.01	Α	Added Sensor Endcap O-Ring MJ		RB	CB

# SBE 39 (Low Pressure Paine) Spares Kit

Spare Parts

SBE P/N	Part Description	Primary SBE Application	QTY
30084	O-Ring, Parker, 2-220N674-70	Sensor endcap to Housing O-Ring	2
30558	Silicagel Desiccant, 1 gram	Moisture absorption for interior of sensor	2
30932	O-Ring, Parker, 2-023N674-70	Sensor endcap to Pressure Sensr O-Ring	2

#### A. REPLACING THE BATTERY

- 1. Unscrew connector endcap slowly, and carefully pull SBE 39 sensor assembly out of housing.
- 2. Hold Battery connector plates with your thumb while replacing 9V battery.
- 3. Backfill the sensor with Argon or another Noble gas if available.
- 4. Replace the L-Seal and backup ring, and carefully screw sensor back together.
- 5. Make sure there are no stray parts or wires caught in threads as you close the sensor.

## B. Replacing the desiccant bags.

#### 1. NOTES

- a. When working with open sensors and with desiccant bags, make sure your hands are clean and completely dry.
- b. Never allow a broken desiccant bag to remain in the sensor.
- 2. Inside the Brown tube
  - a. To remove the tube, you will need to remove the battery, and unscrew the 2 battery plate retaining screws.
  - b. Remove battery plate, and carefully slide off the tube.
  - c. Replace desiccant such that it will not be able to damage or interfere with any internal wiring of the sensor.
  - d. Replace all parts in same manner as you removed them.
- 3. By the battery
  - a. Simply remove the old desiccant and tuck the new one in place against back of PCB and secured with the rubber band.

### C. Replacing O-Rings

- 1. When working with o-rings, always make sure your hands are clean.
- 2. Always use silicone –based lubricant, never oil or petroleum-based.
- 3. Remove old o-ring and clean out groove with a clean, soft brush.
- 4. Lubricate new o-ring, o-ring groove and seating surface with fresh o-ring lube.
- 5. Replace o-ring and close sensor immediately to avoid allowing debris to settle on the lubricant.

PROCEDURE NUMBER: 67085

TITLE: SBE 39 (Low Pressure Paine) Spares Kit

**REVISION:** A

**EFFECTIVE DATE: 11/25/2002** 

CHECKED BY: \_\_\_\_\_ PAGE 1 of 1