# **APPLICATION NOTE NO. 2D**

# Revised March 2014

# **Instructions for Care and Cleaning of Conductivity Cells**

This application note presents recommendations for cleaning and storing conductivity sensors. The application note is divided into four sections:

- General discussion
- Identifying damaged of severely fouled conductivity cells
- Rinsing, cleaning, and storage procedures
- Cleaning materials

### **General Discussion**

Since any conductivity sensor's output reading is proportional to its cell dimensions, it is important to keep the cell clean of internal coatings. Cell electrodes contaminated with oil, biological growths, or other foreign material will eventually cause low conductivity readings. To control growth of bio-organisms in the conductivity cell, follow these rinsing and cleaning recommendations.

- Bleach is extremely effective in controlling growth of bio-organisms in the conductivity cell. Sea-Bird recommends cleaning the conductivity sensor in a dilute bleach solution.
- Triton X-100 is a mild, non-ionic surfactant (detergent), valuable for removal of surface and airborne oil ingested into the CTD plumbing as the CTD is removed from the water and brought on deck. Sea-Bird recommends rinsing and cleaning the conductivity sensor in a Triton solution.
- White vinegar, which is 5 8% acetic acid, **may** be used to remove minor mineral deposits on the inside of the cell.

No adverse effects have been observed as a result of dry storage, if the cell is rinsed or soaked with fresh, clean water before storage to remove any salt crystals. This leads to the following conductivity cell storage recommendations:

- Short-term storage (< 1 day, typically between casts): If there is no danger of freezing, store the cell with a dilute bleach solution in Tygon tubing looped around the cell. If there is danger of freezing, store the cell dry, with Tygon tubing looped around the cell.
- Long-term storage (> 1 day): Since conditions of transport and long-term storage are not always under the user's control, store the conductivity cell dry, with Tygon tubing looped around the cell ends. Dry storage eliminates the possibility of damage due to unforeseen freezing, as well as the possibility of bio-organism growth in water in the cell. Filling the cell with a Triton X-100 solution for 1 hour before deployment will *rewet* the cell adequately.

The Tygon tubing looped around the ends of the conductivity cell, whether dry or filled with a bleach or Triton solution, has the added benefit of keeping air-borne contaminants (abundant on most ships) from entering the cell.

# **Identifying Damaged or Severely Fouled Cells**

Every conductivity calibration certificate has a frequency output for *zero* conductivity, obtained from a cell thoroughly rinsed in distilled or de-ionized water, with all the water shaken out (**dry cell**). A *zero conductivity frequency* that has changed by more than a few 10ths of a Hertz may indicate a cell that is damaged or considerably out of calibration. Noisy readings (± a few 10ths of a Hertz) indicate a dirty cell; follow the procedure for *Cleaning Severely Fouled Sensors* to clean a dirty cell.

Frequency associated with *zero* conductivity (dry conductivity cell). Variation of ± few 10ths of a Hz indicates a dirty cell.

BATH TEMP (ITS-90)	BATH SAL (PSU)	BATH COND (Siemens/m)	INST FREO (Hz)	INST COND (Siemens/m)	RESIDUAL (Siemens/m)
22.0000	0.0000	0.00000	2448.38	0.0000	0.00000
1.0000	34.6962	2.96668	4921.91	2.9667	0.00000
4.5000	34.6766	3.27284	5108.92	3.2728	-0.00000
15.0000	34.6339	4.25160	5664.72	4.2516	-0.00000
18.5000	34.6244	4.59565	5847.26	4.5957	0.00000
24.0000	34.6134	5.15177	6130.50	5.1518	0.00000
29.0000	34.6065	5.67181	6383.64	5.6718	0.00000
32.5000	34.6019	6.04282	6558.06	6.0428	-0.00000

# Rinsing, Cleaning, and Storage Procedures

**Note**: See *Cleaning Materials* below for discussion of appropriate sources / concentrations of water, Triton X-100, bleach, white vinegar, and tubing.

#### **CAUTIONS:**


- The conductivity cell is primarily glass, and can break if mishandled. Use the correct size Tygon tubing; using tubing with a smaller ID will make it difficult to remove the tubing, and the cell may break if excessive force is used. The correct size tubing for cleaning / storing all cells produced since 1980 is 7/16" ID, 9/16" OD. Instruments shipped prior to 1980 require 3/8" ID tubing.
- **Do not put a brush or object (e.g., Q-Tip) inside the conductivity cell to clean it or dry it.** Touching and bending the electrodes can change the calibration; large bends and movement of the electrodes can damage the cell.
- If a dissolved oxygen (DO) sensor is plumbed to the CTD Before soaking the conductivity cell for more than 1 minute in Triton X-100 solution, disconnect the tubing between the conductivity cell and DO sensor to prevent extended Triton contact with the DO sensor membrane (SBE 43) or optical window (SBE 63). Extended Triton contact can cause sensitivity [slope] changes, usually temporary, to the sensors. For rinsing, cleaning, and storage, see *Application Note 64* for the SBE 43 or the SBE 63 manual for the SBE 63.
- IDO and ODO MicroCATs (37-SMP-IDO, SIP-IDO, IMP-IDO, 37-SMP-ODO, SIP-ODO, IMP-ODO) have an integrated dissolved oxygen sensor. Do not follow the rinsing, cleaning, and storage recommendations in this application note; extended Triton contact with the DO sensor membrane (IDO MicroCATs) or DO sensor optical window (ODO MicroCATs) can cause sensitivity [slope] changes, usually temporary, to the sensors. For rinsing, cleaning, and storage, see the applicable MicroCAT manual.

# Active Use (after each cast)

- 1. Rinse: Remove the plumbing (Tygon tubing) from the exhaust end of the conductivity cell. **Flush** the cell with a **0.1% Triton X-100** solution. **Rinse** thoroughly with **fresh**, **clean water** and drain.
  - If not rinsed between uses, salt crystals may form on the conductivity cell platinized electrode surfaces. When the instrument is used next, sensor accuracy may be temporarily affected until these crystals dissolve.
- 2. Store: The intent of these storage recommendations is to keep contamination from aerosols and spray/wash on the ship deck from harming the sensor's calibration.
  - *No danger of freezing*: Fill the cell with a 500 1000 ppm bleach solution, using a loop of Tygon tubing attached to each end of the conductivity sensor to close the cell ends.
  - **Danger of freezing**: Remove larger droplets of water by blowing through the cell. **Do not use compressed air**, which typically contains oil vapor. Attach a loop of Tygon tubing to each end of the conductivity cell to close the cell ends.

### Routine Cleaning (no visible deposits or marine growths on sensor)

- 1. **Agitate** a **500 1000 ppm Bleach** solution warmed to 40 °C (wrist warm) through the cell in a washing action (this can be accomplished with Tygon tubing and a syringe kit see *Application Note 34*) for **2 minutes**. **Drain and flush** with warm (not hot) fresh, clean water for **5 minutes\* or until rinsed thoroughly**.
- Agitate a 1%-2% Triton X-100 solution warmed to 40 °C (wrist warm) through
  the cell many times in a washing action (this can be accomplished with Tygon
  tubing and a syringe kit). Fill the cell with the solution and let it soak for 1 hour.
  Drain and flush with warm (not hot) fresh, clean water for 5 minutes\* or until
  rinsed thoroughly.
- \* If you do not have a large supply of fresh water: As a minimum, flush the cell with enough warm, fresh, clean water to fill the cell five times, or until rinsed thoroughly.

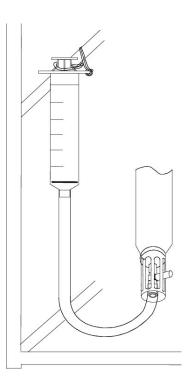

SBE 4 Conductivity Sensor

# Cleaning Severely Fouled Sensors (visible deposits or marine growths on sensor, and/or shift in zero conductivity frequency)

- 1. Repeat the *Routine Cleaning* procedure up to 5 times.
  - A. Thoroughly rinse in distilled or de-ionized water, and shake out all the water. With the conductivity cell dry, take and record a raw conductivity reading (in Hz). Compare to the *zero conductivity frequency* on the calibration sheet. The output should be within a few tenths of a Hz of the *zero conductivity frequency*. If not, proceed to Step 2.
- 2. Clean with a white vinegar solution or diluted HCl solution; see the *Cleaning Materials* section of this application note for details.

If the zero conductivity is still outside the expected range, the conductivity cell may require factory cleaning.

## Long-Term Storage (after field use)

- 1. Rinse: Remove the plumbing (Tygon tubing) from the exhaust end of the conductivity cell. **Flush** the cell with a **0.1% Triton X-100** solution. **Rinse** thoroughly with **fresh**, **clean water** and drain. Remove larger droplets of water by blowing through the cell. **Do not use compressed air**, which typically contains oil vapor.
- 2. Store: Attach a loop of Tygon tubing to each end of the conductivity cell to close the cell ends and prevent contaminants from entering the cell.
  - Storing the cell dry prevents the growth of any bio-organisms in water in the cell, thus preserving the calibration.
- 3. When ready to deploy again: **Fill** the cell with a **0.1% Triton X-100** solution for **1 hour** before deployment. Drain the Triton X-100 solution; there is no need to rinse the cell.

# **Cleaning Materials**

#### Water

De-ionized (DI) water, commercially distilled water, or fresh, clean, tap water is recommended for rinsing, cleaning, and storing sensors.

On ships, fresh water is typically made in large quantities by a distillation process, and stored in large tanks. This
water may be contaminated with small amounts of oil, and should not be used for rinsing, cleaning, or storing
sensors.

Where fresh water is extremely limited (for example, a remote location in the Arctic), you can substitute **clean seawater** for rinsing and cleaning sensors. If not immediately redeploying the instrument, follow up with a **brief fresh water rinse** to eliminate the possibility of salt crystal formation (which could cause small shifts in calibration).

• The seawater must be extremely clean, free of oils that can coat the conductivity cell. To eliminate bio-organisms in the water, boil the water or filter it with a 0.5 micron filter.

### Triton X-100

Triton X-100 is Octyl Phenol Ethoxylate, a mild, non-ionic surfactant (detergent). Triton X-100 is included with every CTD shipment and can be ordered from Sea-Bird, but may be available locally from a chemical supply or lab products company. It is manufactured by Avantor Performance Materials (http://avantormaterials.com/commerce/product.aspx?id=2147509608). Other liquid detergents can probably be used, but scientific grades (with no colors, perfumes, glycerins, lotions, etc.) are required because of their known composition. It is better to use a non-ionic detergent, since conductivity readings taken immediately after use are less likely to be affected by any residual detergent left in the cell.

100% Triton X-100 is supplied by Sea-Bird; dilute the Triton as directed in Rinsing, Cleaning, and Storage Procedures.

#### Bleach

Bleach is a common household product used to whiten and disinfect laundry. Commercially available bleach is typically 4 % - 7% (40,000 – 70,000 ppm) sodium hypochlorite (Na-O-Cl) solution that includes stabilizers. Some common commercial product names are Clorox (U.S.) and eau de Javel (French).

Dilute to 500 - 1000 ppm. For example, if starting with 5% (50,000 ppm) sodium hypochlorite, diluting 50 to 1 (50 parts water to 1 part bleach) yields a 1000 ppm (50,000 pm / 50 = 1000 ppm) solution.

## Tygon Tubing

Sea-Bird recommends use of Tygon tubing, because it remains flexible over a wide temperature range and with age. Tygon is manufactured by Saint-Gobain (www.tygon.com). It is supplied by Sea-Bird, but may be available locally from a chemical supply or lab products company.

Keep the Tygon in a clean place (so that it does not pick up contaminants) while the instrument is in use.

## White Vinegar

White vinegar is a common household product used to dissolve mineral deposits, and may be used to remove minor mineral contamination of the conductivity cell. Commercially available white vinegar is typically 5 - 8% acetic acid (CH<sub>3</sub>COOH) in aqueous solution; verify that there are no oils or other ingredients.

- 1. Prepare for cleaning:
  - A. Place a 0.6 m (2 ft) length of Tygon tubing over the end of the conductivity cell.
  - B. Clamp the instrument so that the cell is vertical, with the Tygon tubing at the bottom end.
  - C. Loop the Tygon tubing into a U shape, and tape the open end of the tubing in place at the same height as the top of the glass cell.
- 2. Clean the cell:
  - A. Pour **weak white vinegar** solution (1 part white vinegar, 2 parts water) into the open end of the tubing until the cell is nearly filled. **Let it soak for 2-3 minutes only.**
  - B. Drain the solution from the cell and flush for 5 minutes with warm (not hot), clean, de-ionized water.
  - C. Rinse the exterior of the instrument to remove any spilled solution from the surface.
  - D. Fill the cell with a 1% Triton X-100 solution and let it stand for 5 minutes.
  - E. Drain and flush with warm, clean, de-ionized water for 1 minute.
  - F. Carefully remove the 0.6 m (2 ft) length of Tygon tubing.
- 3. With the conductivity cell dry, take and record a raw conductivity reading (in Hz). Compare to the *zero conductivity frequency* on the calibration sheet. The output should be within a few tenths of a Hz of the *zero conductivity frequency*. If not, repeat Steps 1 and 2 with a moderate white vinegar solution (1 part white vinegar, 1 part water) and repeat the test. If still outside the expected range, repeat with a full strength white vinegar solution and repeat the test. If still outside the expected range, return to the factory or see *Hydrochloric Acid (HCl)* below.
- 4. Prepare for deployment, **or** follow recommendations above for storage.

## Hydrochloric Acid (HCl)

Many years ago, Sea-Bird recommended cleaning with a hydrochloric acid (HCl) solution to eliminate bio-organisms or mineral deposits on the inside of the cell. However, bleach cleaning has proven to be effective in eliminating growth of bio-organisms, and is much easier to use and dispose of than acid. Data from many years of use shows that mineral deposits are an unusual occurrence. Sea-Bird recommends that, in most cases, hydrochloric acid should not be used to clean the conductivity sensor. In rare instances, it may still be required for mineral contamination of the conductivity cell. Sea-Bird recommends that you return the equipment to the factory for this cleaning if it is necessary. Information below is provided if you cannot return the equipment to Sea-Bird.

#### **CAUTIONS:**

- SBE 37-IMP, SMP, SIP, IMP-IDO, SMP-IDO, SIP-IDO, IMP-ODO, SMP-ODO, SIP-ODO MicroCAT; SBE 49 FastCAT; SBE 52-MP Moored Profiler CTD; or other instruments with an integral, internal pump Do not perform acid cleaning, which may damage the internal, integral pump. Return these instruments to Sea-Bird for servicing if acid cleaning is required.
- SBE 9*plus*, 25, or 25*plus* CTD Remove the SBE 4 conductivity cell from the CTD and remove the TC Duct before performing acid cleaning.
- All instruments that include AF24173 Anti-Foulant Devices Remove the AF24173 Anti-Foulant Devices before performing acid cleaning; see the instrument manual for details and handling precautions.

# WARNING! Observe all precautions for working with strong acid. Avoid breathing acid fumes. Work in a well-ventilated area.

The acid cleaning procedure for the conductivity cell uses approximately 50 - 100 cc of acid. Sea-Bird recommends using a 20% concentration of HCl. However, acid in the range of 10% to full strength (38%) is acceptable.

If starting with a strong concentration of HCl that you want to dilute:

For each 100 cc of concentrated acid, to get a 20% solution, mix with this amount of water -

Water = [(conc% / 20%) - 1] \* [100 + 10 (conc% / 20%)] cc

Always add acid to water; never add water to acid.

Example -- concentrated solution 31.5% that you want to dilute to 20%:

[(31.5% / 20%) - 1] \* [100 + 10 (31.5% / 20%)] = 66.6 cc of water.

So, adding 100 cc of 31.5% HCl to 66.6 cc of water provides 166.6 cc of the desired concentration.

For 100 cc of solution:

100 cc \* (100 / 166.6) = 60 cc of 31.5% HCl

66.6 cc \* (100 / 166.6) = 40 cc of water

## For acid disposal, dilute the acid heavily or neutralize with bicarbonate of soda (baking soda).

- 1. Prepare for cleaning:
  - A. Place a 0.6 m (2 ft) length of Tygon tubing over the end of the conductivity cell.
  - B. Clamp the instrument so that the cell is vertical, with the Tygon tubing at the bottom end.
  - C. Loop the Tygon tubing into a U shape, and tape the open end of the tubing in place at the same height as the top of the glass cell.
- 2. Clean the cell:
  - A. Pour 10% to 38% HCl solution into the open end of the tubing until the cell is nearly filled. Soak for 1 minute only.
  - B. Drain the acid from the cell and flush for 5 minutes with warm (not hot), clean, de-ionized water.
  - C. Rinse the exterior of the instrument to remove any spilled acid from the surface.
  - D. Fill the cell with a **1% Triton X-100** solution and let it stand for 5 minutes.
  - E. Drain and flush with warm, clean, de-ionized water for 1 minute.
  - F. Carefully remove the 0.6 m (2 ft) length of Tygon tubing.
- 3. Prepare for deployment, **or** follow recommendations above for storage.

# **Application Note Revision History**

Date	Description			
January 1998	Initial release.			
October 2002	Remove reference to part number for the small anti-foul cylinders (that have been eliminated) Tygon tubing.			
January 2005	Change in recommendations. Clean with bleach solution as well as Triton. Acid cleaning is not recommended in general, but some information on acid is still provided for the few cases when it is necessary. A section on Materials added, defining water, Triton, etc. in more detail.			
July 2005	Include information on common names of commercially available bleach			
October 2006	Update manufacturer name and website link for Triton			
September 2008	Add SBE 52-MP to list of instruments with integral, internal pump that should not have acid cleaning.			
October 2010	Add reference to IDO MicroCATs, with caution to following cleaning and storage			
	procedures in Application Note 64 instead of in this application note.			
	Update address.			
October 2012	Update manufacturer information for Triton.			
	Add information on 25plus.			
	Add reference to ODO MicroCATs, with caution to following cleaning and storage			
	procedures in ODO manual instead of in this application note.			
	• Eliminate 'new' language regarding cleaning and storing, since recommendations date from			
	2006.			
March 2014	Add information on cleaning with white vinegar.			
	Add information on checking zero conductivity frequency to verify cleanliness.			
	Add information on cleaning if SBE 63 Optical Dissolved Oxygen Sensor on system.			
	Update language on <i>recent</i> recommendations (which dated back to 2005).			